

四川蓉创亿科技有限公司

Sichuan Roncy Technology Co., Ltd.

DC Uninterruptible Power Supply User Manual

直流不间断电源用户手册



Thank you for choosing our DC UPS,
please carefully read the user manual before operating

感谢您选择我们的直流 UPS。在操作之前，请仔细阅读《用户手册》，以确保获得最佳性能。

1. DC uninterruptible power supply accessories

直流不间断电源配件

1) 1*DC uninterruptible power supply

1*直流不间断电源

2) 1 x 0.8m AC power cord

1x0.8 米交流电源线

3) 1 x 0.3m one for two 5.5*2.5 male to 5.5*2.5 male DC power cable

1x0.3米一对二5.5*2.5 公头转 5.5*2.5 公头直流电源线

4) 1*User Manual

1*用户手册

2. Product features

产品特点

1) Built-in adapter, input 85Vac-265Vac wide AC voltage range.

内置适配器, 输入85Vac-265Vac 宽交流电压范围。

2) Built-in high-capacity lithium battery (8000mah-20000mah optional), which can provide longer backup time.

内置高容量锂电池(8000mah-20000mah 可选), 可为负载提供较长的备份时间。

3) Suitable for mostly solar powered equipments, camera equipments, network connection equipments, etc.

适用于大多数太阳能供电设备, 摄像设备, 网络连接设备等。

4) Power over Ethernet (POE) can be provided (POE voltage can be customized), and the data and power can be transmitted simultaneously, simplifying wiring.

可提供以太网供电 (POE) (POE 电压可定制), 可同时传输数据和电源, 简化布线。

5) 5V USB output, can charge for mobile phones, PSP, PDA, IPOD, MP4 and other devices.

5V USB输出, 可为手机、PSP、PDA、IPOD、MP4等设备充电。

6) Intelligent circuit design with overcharge, over-discharge and short-circuit protection functions.

智能电路设计, 具有过充、过放和短路保护功能。

3. Instructions

使用说明

1) To avoid excessive discharge of the lithium battery, please restart the UPS when the battery power is lower.

为避免锂电池过度放电，请在电池电量过低时重新启动 UPS。

2) Before connecting the load to the UPS, pls check rated operating voltage, current and polarity, you can find this information on its original adapter.

在将负载连接到 UPS 之前，必须检查其额定工作电压、电流和极性，您可以在其原装适配器上找到这些信息。

3) Please fully charge the UPS battery before connecting the load.

请在连接负载前将 UPS 电池充满电。

4) The output power of this model is controlled by the total power capacity. Loads connected to all ports, the total power cannot exceed the maximum output power. Otherwise, all output ports will be closed and the UPS will automatically shut down after the status indicator light flashes for 5 seconds. In this case, please remove the load.

本机型的输出功率受总功率容量控制。连接到所有端口的负载的总功率不能超过最大输出功率。

否则，所有输出端口将被关闭，UPS将在状态指示灯闪烁5秒后自动关机。在这种情况下，请移除超出的负载。

5) Long press the power button for 2-3 seconds to turn on the UPS.

长按电源按钮 2-3 秒，打开 UPS。

By moving the POE voltage switch, select the output voltage of the POE port between 15V and 24V (other voltages can be customized).

通过移动 POE 电压开关可在 15V 和 24V 之间选择 POE 端口的输出电压(其他电压可定制)。

When plugged into mains power, the charging status indicator light turns red.

插入城市电源后，充电状态指示灯变为红色。

100% means fully charged electricity. During the charging process, the battery indicator light displays 25%, 50%, and 75% and 100%.

100% 表示已充满电。充电过程中，电量指示灯依次显示电池容量的 25%、50%、75% 和 100%。

When the mains power is disconnected, the status indicator light turns green, indicating battery backup mode, and the power indicator light goes out one by one from 100%, 75%, 50% to 25%.

当断开城市电源时，状态指示灯变为绿色，表示电池备份模式，电源指示灯会从 100%、75%、50% 到 25% 逐个灭。

When the 25% indicator light flashes, it indicates that the battery power is lower. At this time, long press the power button for 2-3 seconds to turn off the UPS and stop output voltage.

当 25% 的指示灯闪烁时，表示电池电量很低，此时长按电源按钮 2-3 秒钟即可关闭 UPS 并停止输出电压。

6) USB provides stable charging for 5V digital products using original charging cables.

USB 为使用原装充电线的 5V 数码产品提供稳定的充电。

7) When the battery power is lower, the UPS will automatically shut down. When the AC power is restored, the UPS will restart output power.

电池电量不足时，UPS 会自动关机，当交流电恢复时，UPS 会重新启动输出电源。


8) If the UPS will not be used for a long time, please fully charge it and place it in a cool place. If it can not be turned on after long time storage, please plug in the mains power to charge until the status indicator light turns green. If UPS is not used for long time, it is recommended to charge it once a month.

如果长时间不使用 UPS，请将其充满电并置于阴凉处。

如果存放时间过长无法开机，请插入市电充电，直到状态指示灯变绿。长期不使用 UPS，建议每月充电一次。

4. Function description

功能说明

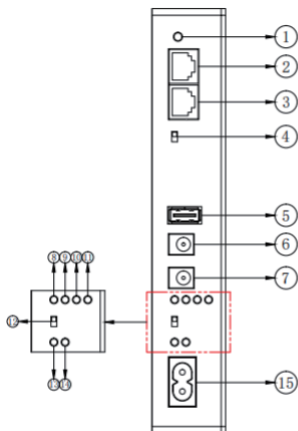

- 1) POE reset button
POE 复位按钮
- 2) Ethernet output interface (POE output: 15V/24V)
以太网输出接口 (POE 输出:15V/24V)
- 3) LAN Ethernet interface
局域网以太网接口
- 4) Output voltage selector (15V/24V)
输出电压选择器(15V/24V)
- 5) USB (5V DC) output port
USB (5V直流)输出端口
- 6) Output voltage selector (9V)
输出电压选择器(9V)
- 7) Output port (12V)
输出端口(12V)
- 8) 25% battery capacity LED indicator
25%电池容量LED指示灯

- 9) 50% battery capacity LED indicator
50%电池容量 LED指示灯
- 10) 75% battery capacity LED indicator
75% 电池容量 LED指示灯
- 11) 100% battery capacity LED indicator
100%电池容量 LED 指示灯
- 12) On/off switch
开关 开关
- 13) Working status indicator light
工作状态指示灯
- 14) Charging status indicator light
充电状态指示灯
- 15) AC input socket
交流输入插座

Model	UPS1026C UPS1036C UPS1052C	UPS1026CP UPS1036CP UPS1052CP	UPS1065C	UPS1065CP
Input	85-265Vac/50-60Hz			
	USB5V/2A	USB5V/2A	USB5V/2A	USB5V/2A
	DC9V/2A	DC9V/2A	DC9V/2A	DC9V/2A
	DC12V/2A	DC12V/2A	DC12V/2A	DC12V/2A
		POE15V/1A		POE15V/1A
		POE24V/1A		POE24V/1A
Output Power (max value)	26W/36W/52W		65W	
Quantity& battery capacity	Sufficient 8000mAh~14000mAh 2000mAh(软包)			
Operating temp	0°C~45°C			
Storage temp	-10°C~60°C			
Humidity	10%-90%RH			
Dimensions	200*110*38mm			
Net weight	0.4kg	0.45kg	0.45kg	0.5kg

6. Precautions

注意

1) Before connecting the load to the UPS, please check the operating voltage, current and polarity of the load and select the corresponding voltage.

在将负载连接到 UPS 之前，请检查负载的工作电压、电流和极性，然后选择相应的电压。

2) Please fully charge at first use.

首次使用前请充满电。

3) It is strictly prohibited to drop, impact, disassemble and repair without permission.

严禁跌落、撞击、私自拆卸和修理。

4) Do not put the UPS into water or get it wet.

请勿将 UPS 放入水中或将其弄湿。

5) Do not place the UPS in fire or heating.

请勿将 UPS 置于火中或暖气中。

6) Do not use UPS in any flammable environment.

不要在任何易燃环境中使用 UPS。

7) Do not place the UPS within the reach of children.

不要将 UPS 放在儿童可以触及的地方。

8) Do not use normal temperature UPS in low temperature environments.

不要将 常温UPS应用于低温环境。

9) Please charge and activate the UPS within 5 days after the automatic protection shutdown, otherwise the battery may need to be removed and charged separately for activation.

UPS 放电到自动保护停机后请在 5 天内进行充电激活，否则电池有可能需要取出来单独充电激活。